

**Thank you for choosing us!**

**We certainly hope you enjoy your vacation.**

**If at any time you have any question whatsoever, small or large,  
PLEASE CALL US IMMEDIATELY.**

**Larry: 918-822-4917**

**Charlotte: 405-578-5701**

**Any question or concern at all, do not hesitate to call us. We are here  
for you.**

**Have a great time!**

**Again, thank you,**

**Larry and Charlotte Wood**

## Rental Rules:

1. Wash all dishes, utensils and coffee maker if used and place in the sink in the drainer. Do not put dishes in the cabinet while wet. Clean the stovetop and oven if used.
2. Clean the bathroom of any extreme residues in the sink, shower or toilet. **Renter is responsible for replacing any fixtures that are ruined or not cleanable.**
3. Cover sheets and pillowcases are provided. Renters must bring their own blankets or sleeping bags. **Renter is responsible for replacing any stained, torn, or damaged mattresses, pads or cushions.**
4. Place a sheet over the cushions if the dining table is converted into a bed. Do not sleep directly on the dinette cushions. **Renter is responsible for replacing any damaged items.**
5. Keys are located in the outdoor refrigerator. Please lock the door of the RV when you leave and place the keys there at checkout. **Renter will be responsible for replacing lost keys.**
6. Absolutely no smoking or pets in our RV. NONE. **Renter will forfeit his or her deposit if any evidence of either is found.**
7. Please take pictures and even a walkthrough video upon check in for your own documentation. Send your walkthrough video to: 405-578-5701 or [tynercreeksoftware@gmail.com](mailto:tynercreeksoftware@gmail.com)
8. If you do not have a sewer hookup, it is UP TO THE RENTER to perform this task daily: <https://rvshare-3.wistia.com/medias/7p2v79418e>

Our family looks forward to sharing our RV with you. We only ask that you treat it with care just as if it were your own. We supply fitted sheets and pillowcases, cups, plates, utensils and cookware. You will need to bring toiletries, blankets or sleeping bags, food, aluminum foil if desired, grilling supplies, coffee or other beverages, and phone cords and cubes.

## Radio Instructions:



If the number (2) in the top right corner is red, then the outside speakers are OFF. Blue means that zone is on. See the digital message below the radio station on the panel. In the picture above, ZONE 1 (inside) are the only speakers playing.

Pushing the MODE button on the left until you see Front - HDMI will allow you to watch Blu Ray DVDs. The Blue Ray DVD player is behind the TV.

Pushing the MODE button on the left until you see "BT" will play your Bluetooth device.

## Futon Instructions:



1. Remove the two back cushions.
2. Place your hands where the two red arrows are and lift the bottom panel upwards.
3. Fold the two legs all the way out. Make sure they go all the way outward.
4. Fold down the back panel of the sofa.
5. Replace the back cushions if desired. Cover with the fitted sheet provided.

## Dinette - Bed Conversion Instructions

1. Lift the table top straight up to disconnect from pole supports.
2. Remove poles and lie them on the floor.
3. Place the tabletop on the side piece supports.
4. Remove the left and right back cushion and place them on the table top horizontally. If the tabletop is not covered, rotate the cushions.

Bedding: <https://rvshare-3.wistia.com/medias/aqxu4yh3rg>



## Oven Instructions:



1. Fold the glass top up and back.
2. Turn the on switch (all the way to the right in the picture) so that all knobs are lit in blue.
3. To light a burner, turn the knob slightly to the left to the flame icon.
4. Push the knob in and hold it in.
5. Turn the striker knob (all the way to the left in the picture) until the small pilot under the burner is lit.
6. Turn the knob to the left until the flame is of desired size.
7. TO LIGHT THE OVEN:
8. Turn the far right knob to the flame icon.
9. Push and hold the knob in.
10. Open the oven and look inside.
11. Rotate the striker knob (all the way to the left in the picture) until you see the small blue pilot light lit. You may have to hold the knob in while rotating the striker several times.
12. Once the small blue flame is visible, turn the oven knob to the left to the desired temperature.

Fridge: <https://rvshare-3.wistia.com/medias/egh66mh197>