RV Share Camper Operations Guide

Water

- Water tank is located under the bed. Fillup port is on the driver's side of the camper.
- City or campsite water hookup is on the drivers side. Please use our attached hose and filter when accessing city water hookups.
- Only use the water pump when not on city water hookup. City/camp water has constant pressure and doesn't require the pump to be used. Make sure water pressure is good enough from the city/camp hookup or toilet will not flush properly
- · In the event of a leak, please turn off the water and resume dry-camping only. Contact the owner

Heat/AC

- · Heat is provided by the infrared heater. There is a remote to turn this on.
- The AC unit is powerful and will absolutely keep the camper cool even on the hottest days

Power

- When using campsite power (240v) please use the attached surge protector
- You can also use a 110v extension cord to power basic amenities like the AC and lights
- The fuse box is under the bunks in a concealed panel

Awning

• Please hold the door open so it clears the awning arms when opening the awning. Failure to do so could result in a bind of the aluminum arms (common occurrence). Have a spotter make sure the awning fully extracts and retracts. Also, watch your head! I've bumped mine a bunch on the arms!

Waste

- Please empty the black and grey tanks prior to returning the camper. The waste water removal tubes are located in the bumper cavity. Simply hook them up, extend to the drain hole, and open the black tank first, allowing it to drain at a slight downward angle. When finished, close the black tank and open the grey tank, allow to drain and flush. Clean out the tubes using the water supply nearest to the drain and place back into the bumper cavity. Note: black tank shows ¾ full but it's not. Empty regularly! See video here for more instructions: https://tinyurl.com/rvshareok
- Only flush provided toilet paper down the toilet. No chemicals, no wipes, this could clog the tanks
- · Before emptying the tanks, place the included toilet freshener in the toilet and flush 5 to 6 times
- Trash can is under the sink and should be emptied at the end of your trip
- A broom and vacuum are included to help with cleanup

Hookup

- We will supply a 2" drop hitch if you need it. Anti-sway bars are not provided. A block base, wheel chocks, and chains will be provided.
- Make sure your vehicle can handle 3-4k of load. We will need to verify this before you rent it.
- Make sure you don't hyper-extend the emergency brake cable when hooking up your chains.
 Make sure to test the ball and that is fully connected to your vehicle
- Always check clearance, as the rear stabilizers could possibly drag if you go on very uneven surfaces. Manual stabilizers for the front to be included.
- For safety, always make sure all exterior signal lights are functional on the camper

Any questions or issues? Call Hunter at (207) 319-2747

We hope you enjoy your trip!